

Rodenhouse

Door & Window Inc.

5120 West River Dr. N.E.
Comstock Park, MI 49321

Tel: (616) 784-3365
Fax: (616) 784-7663

www.rodenhouse-door-window.com

Measurements are ALWAYS taken by the opening size.


- **First** - Determine if the installation is going to be blindstop or overlap mount.

What is the difference?

Blindstop windows mount inside of the opening and screw to the blindstop.

Overlap windows overlap the opening and screw to the brickmold (trim).

- **Second** – Measure the width (**A**) at the top, middle, and bottom use the smallest of these for you width.
- **Third** – Measure the height (**B**) at the extreme left and right sides of the opening and use the smallest of these for your height.
- **Fourth** – If your window is a double hung window and the upper and lower sashes are different sizes measure the center meeting rail (**C**).

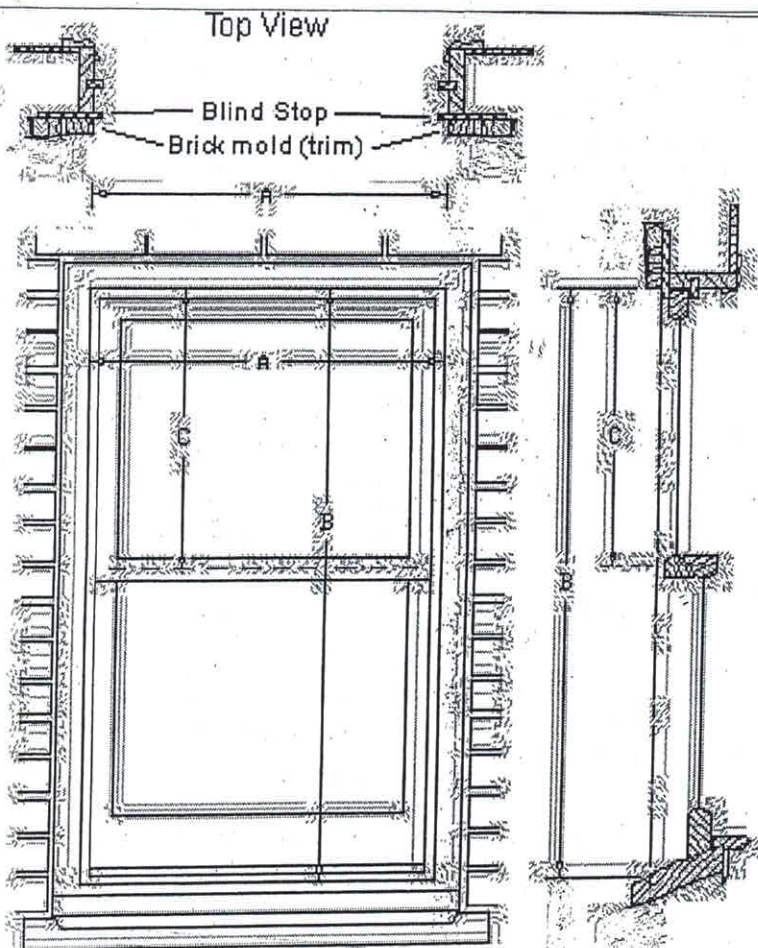

“C” is from top to the centerline of the meeting rail. “C” is only measured when double hung is an oriel or cottage type. (unequal glass size.)

Standard Sill
Measure to the top of sill